



HOW DO I INSTALL SLIME?

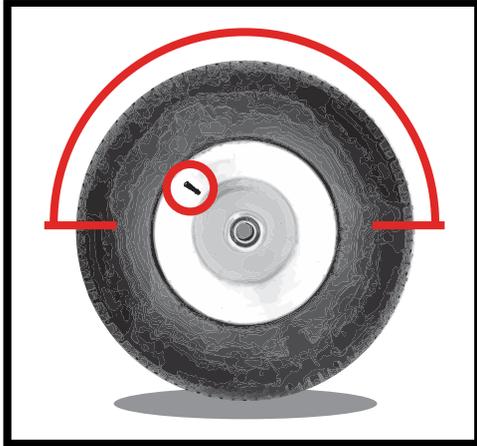

1 Position valve in upper half of tire.

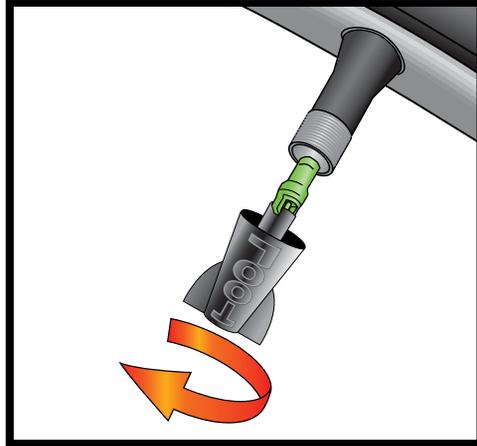

2 Remove valve core with included tool.




3 Allow tire to fully deflate.



4 Remove object (if possible).



5 Attach hose and pump in Slime.

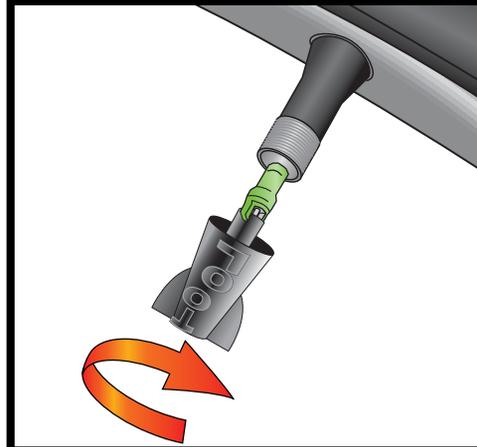

6 Reinstall valve core.



7 Just add air.



8 Drive. Stop. Verify seal and check pressure.