Tire Inflator

USER MANUAL



(Please read this manual prior to using this product)

Contents

1.Attention	1
2.Product description	2
3.Operating instruction	2
4.Function introduction	3
5.Rcommended tire pressure	3

WARNING

Children must not operate the Tire Inflator alone.

Never use the Tire Inflator in direct sunlight, high temperatures, or high pressure environments.

Keep the Tire Inflator away from water and rain; it is not suitable for use in water. To avoid damage, excess heat, toxic fumes, fire, or explosion, turn off and allow the Tire Inflator to cool for 30 minutes after 10 minutes of use.

Always turn off the power switch after use.

Product

Product

Before using this product, carefully read all warnings and instructions. Improper use can result in product damage beyond the Seller's responsibility.


ATTENTION

To minimize the risk of electric shock, refrain from exposing your Tire Inflator to rain. It is recommended to store it indoors and away from any sources of fire.

- 1. This product may experience slight heating during normal operation, which is deemed a typical occurrence.
- 2. In order to prolong the air pump's lifespan, we do not recommend continuous inflation for more than 10 minutes. Should prolonged use be necessary, intermittent breaks are advised to allow for the cooling down of your tire inflator.

PRODUCT SPECIFICATIONS


roduct version	electric pump
roduct model	D17-01
Voltage	7.4 V
Power	50W

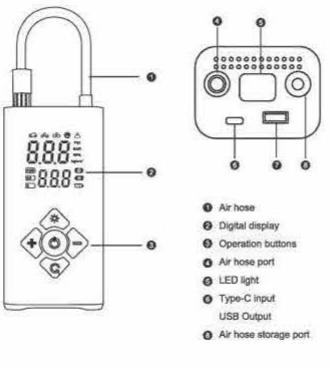

Accessory


LAYOUT

 Four modes



Preset tire pressure

Press and hold * Q " to switch the unit. Use the "+" or "-" button to adjust the numerical value, and wait a few seconds after setting for the numbers to stop flashing. Then turn on the inflation switch to start the process. The tire inflator will automatically stop inflating when it reaches the specified air pressure.

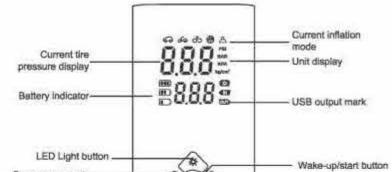

Decrease preset tire pressure button Increase preset

Multifunctional air nozzle







tire pressure button

Switch mode/switch

unit button

Connect the air hose to the tire inflator





Press and hold the " C " button to switch unit.



Press "O" to start the tire

 
OPERATION GUIDE

Instructions for use *Please charge it fully before use



the air hose to the valve








The tire inflator will stop automatically once tire pressure reaches preset

 Connect the other end of Press and hold the "6" button to wake up the tire





O @ CE FC ROHS

Reference Pressure

Motorcycle

Recommended tire pressure

Common bicycle

Mountain Bike

Electric bicycle

Various balls

Above recommended tire pressure values are for reference only. please refer to the requirements of the product being inflated.

Hatchback/Sedan

Road bike

Motorcycle

30-50psl

40-60psi

70-120ps

1.8-2.5bar

1.8-2.5bar

2.2-2.5bar

1-16psi

Made in China Imported by

Falko BV Kelvinstraat 16 6902 PW Zevenaar The Netherlands